■ Specification

Model	ZVH80S70	
Pick up Element	1/3" SONY Super HAD CCD II	
Effective Picture Elements (H×V)	PAL: 976(H)×582(V) NTSC: 976(H)×494(V)	
Horizontal Resolution	700 TV Line	
Minimum Illumination	0.001 Lux	
S/N Ratio	More than 52dB	
Scanning System	2:1 interface	
Synchronous System	Internal, Negative sync.	
Auto Electronic Shutter	NTSC: 1/60s~1/100,000s, PAL: 1/50s~1/100,000s	
Gama Characteristic	0.45	
IR Distance	80 Meters (with ¢ 42X4PCS Infrared LED)	
IR Status	Under 10Lux by CDS	
IR Power On	CDS AUTO Control	
Video Output	1Vpp, 75Ω	
Auto Gain Control	Auto	
UTC	YES	
Power/Current	DC12V(+/-10%)/1500mA	
Lens	6-22mm Manual Zoom Lens	
Dimension (mm)	230(W)x180(H)x115(D)mm	
Weight (g)	2500	
Storage Temperature	-50~+60℃ RH95% MAX	
Operating Temperature	-40~+50°C RH95% MAX	

■ Packing List

No	Name	Model	Number
1.	Weatherproof IR Color Camera	ZVH80S70	1
2.	User Guide	ZVH80S70	1



Franchiser:

ZVH80S70 Color Camera



Weatherproof IR Color Camera



Notes: Before providing power for the camera, please read this User Guide in detail!

Do not attempt to disassemble the camera. If the camera can not work, please contact local franchiser or our company.



■ BRIEF OF PRODUCT

* Sensor (CCD)

Adopt 1/3" SONY Super HAD CCD II Sensor.

* Auto Gain Control (AGC)

Built-in auto gain control **(AGC)** circuit. The color camera can get high definition picture in low Lux condition.

* Scanning Mode


NTSC or PAL mode.

* Water Resistance IP66.

- * UTC
- Up The Coax
- * OSD SETTING

			1		
	LENS	MANUAL			
		AUTO	TYPE:DC/VIDEO		
			MODE:CLOSE/AUTO/OPEN SPEED:0-255		
	SHUTTER/ AGC	AUTO	HIGH LUMINANCE MODE:SHUT+AUTO IRIS/AUTO IRIS		
			BRIGHTNESS:0-255		
			LOW LUMINANCE MODE:OFF/AGC		
			BRIGHTNESS: ×0.25, ×0.5, ×0.75, ×1		
		MANUAL	MODE:SHUT+AGC		
			SHUTTER:1/50,1/120,1/250,1/500,1/1000,1/2000, 1/4000,1/10000		
			AGC:6,12,18,24,30,36,42,44.8		
	WHITE BAL	ATW	SPEED/DELAY CNT/ATW FRAME/ENVIRONMENT		
		PUSH/ANTI CR/PUSH LOCK/USER1/USER2/MANUL			
	BACK LIGHT	OFF/BLC/HLC			
	PICT AD- JUST	MORROR/BRIGHTNESS/CONTRAST/SHARPNESS/HUE/GAIN			
	D-WDR	OFF			
OSD		ON	LUMINANCE/CONTRAST		
SET	MOTION DET	OFF			
		ON	DETECT SENCE/BLOCK DISP/MONITOR AREA/ AREA SEL/TOP/BOTTOM/LEFT/RIGHT		
	PRIVACY	OFF	THE TOTAL PROPERTY OF THE PARTY		
		ON	AREA SEL/TOP/BOTTOM/ LEFT/RIGHT/		
			COLOR/TRANSP/MOSAIC		
	DAY/NIGHT	COLOR	211222 2221		
		B/W	BURST:OFF/ON		
			IR OPTIMIZER:OFF/ON		
			MODE:AUTO/CENTER		
			LEVEL:0-30		
			BURST:OFF/ON		
		AUTO	DELAY CNT/DAY-NIGHT/NIGHT-DAY		
	NR	NR	MODE:Y/C,OFF,Y,C		
	CAMERA ID	OFF/ON			
	SYNC	INT			
	LANGUAGE	ENGLISH/CHINESS/JAPANESS/ESPANOL/PORTUGUES/ PYCCKNN/FRANCAIS/DEUISCH			
	CAMERA RESET/BACK/EXIT/SAVE ALL				
	<u> </u>				

■ CONNECTING

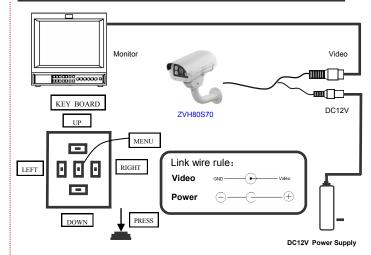

TROUBLE AND SOLUTION

1. No picture after providing power

- May be the power supply voltage abnormity, please check the power supply voltage and pole whether exactitude.
- . Please check all the connecting cable and monitors whether be connected correctly or not.

2. The picture level direction have flowing interference ripples

- . May be caused by the power supply AC ripples, it need filter the wave of the power supply.
- . Check the monitor and peripheral equipments used.

3. The picture background color changes continuously

- . The fluorescent lamp's electromagnetic field cause color roll. This is proper phenomenon of the cameras.
- . Reduce the fluorescent lamp numbers or increase the distance between the camera and the fluorescent lamps can improve it.
- . Use power supply external sync. camera can solve it.

4. The picture smear too mass

- . The power supply's voltage unstable.
- . Connecting cables not connect correctly or have high impedance.



Notes:

- The power supply must through safe attestation. Its output voltage, current, voltage polarity and operating temperature must match the camera's requirement.
- •When using the camera in the thunderbolt condition, please note to mount Anti-thunder device or put off the power supply plug and cable.
- •In order to capture high quality pictures, the power supply's cable and video output cable should not be too long.

INTRODUCTION

Congratulations on your purchase of this product. This User Guide suits ZVH80S70 product. We adopt the latest SONY technical of sensor and driver. The most attractive characteristics are small and easy hidden, suits the elevator and corridor. In addition, it owns the characters of high definition and stability, strong anti-jamming, rich and real color. Fixing and using this model are convenient too. It is very good for you to apply to your CCTV system.

Please read this instruction manual carefully to ensure proper use of the product.



The symbol is intended to alert the user to the presence of important operating and maintenance (servicing)
Instructions in the literature accompanying the appliance.



The symbol is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient Magnitude to constitute a risk of electric shock to persons.



CAUTION: RISK OF ELECTRIC, DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER OR BACK NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO OUALIFIED SERVICE PERSONNEL.

CAUTION: TO PREVENT ELECTRIC SHOCKS AND RISK OF FIRE HAZARDS, DO NOT USE OTHER THAN SPECIFIED POWER SOURCE.



Note:

- Please note the camera's operating temperature and its using environment requirement. Avoid using the camera at too high or too low temperatures. The operating temperature is -50~+60□.
 (Recommendatory operating temperature is -40~+50□.)
- Never make the camera face the sun or bright object. Otherwise, it will damage the CCD.
- Do not mount the camera near by the radiator or heater.